

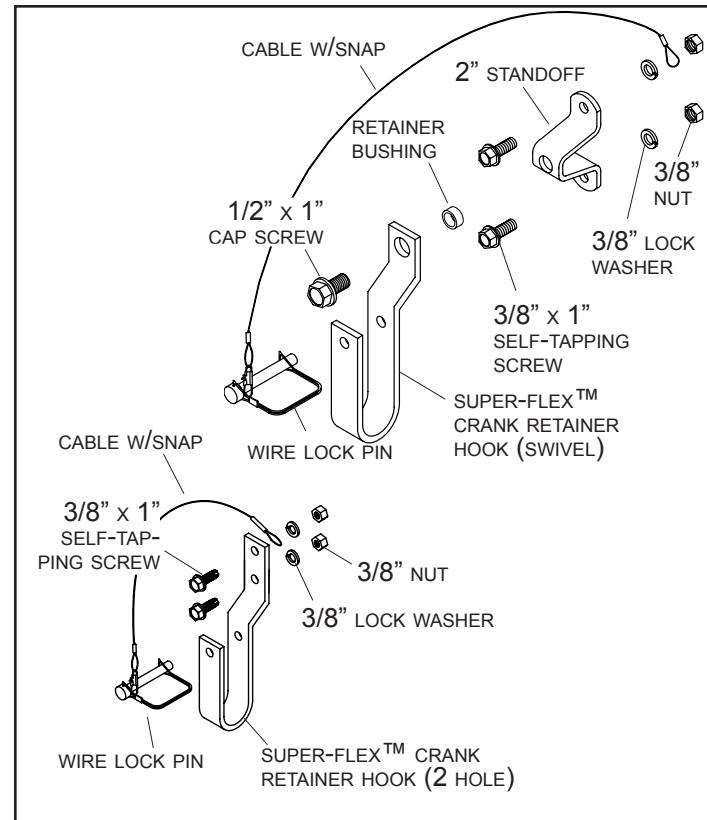


Installation Instructions - Super-Flex™ Crank


P/N 1111892 Rev. B

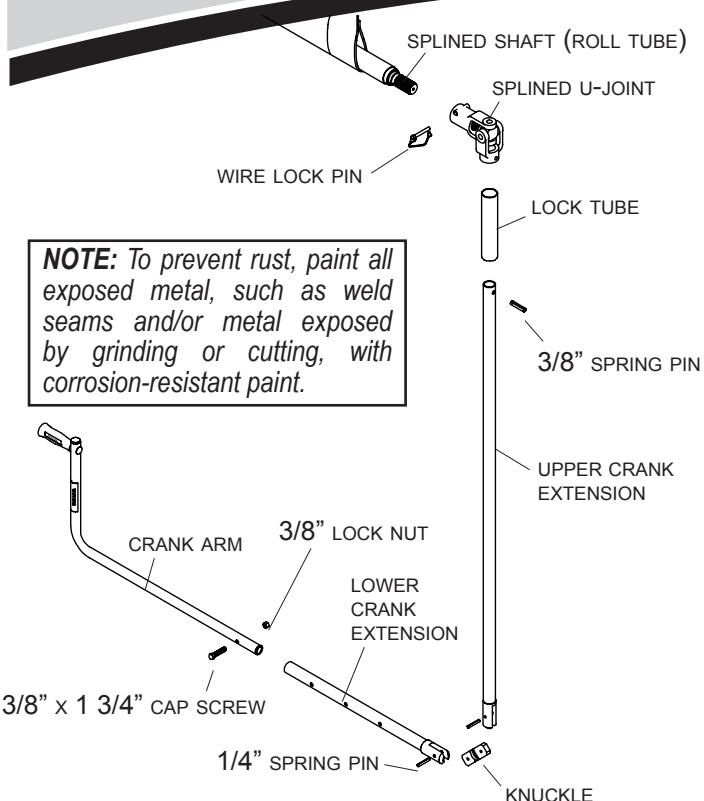


STEP 1: Secure upper crank extension to u-joint with 3/8" spring pin.

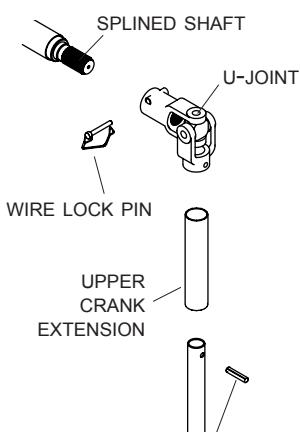


STEP 2: Secure U-joint to splined shaft on roll tube with wire lock pin.

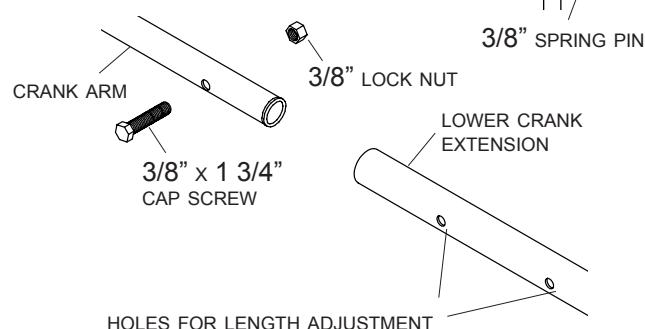

STEP 4: Slide lock tube over upper crank extension. Fasten both upper and lower crank extensions to knuckle with 1/4" spring pins.

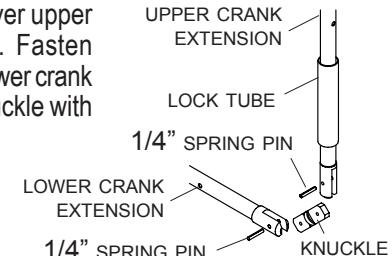

STEP 5: Locate Super-Flex™ crank retainer as shown. Allow room for lock tube to slide so knuckle can bend. Mount retainers with self-tapping screws, lock washers and nuts. Attach keeper cord between lower lock washer and nut.

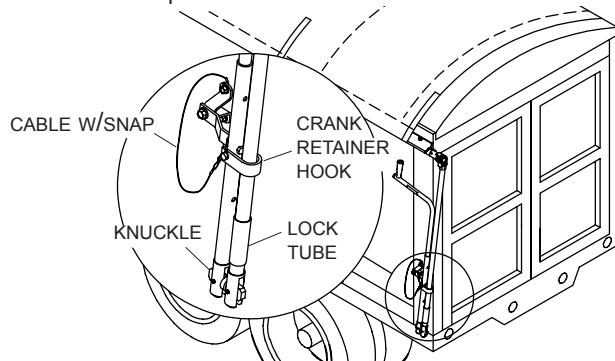

CAUTION Secure lock pins before driving vehicle.

PO BOX 713 ■ 2309 SHUR-LOK STREET
YANKTON, SOUTH DAKOTA 57078-0713
PH. 1-800-474-8756 ■ FAX 605-665-0501



SHUR-CO.® HELP LINE
CALL: 1-866-748-7435
www.shurco.com