


STEP 1: Determine distance over top of bow, then cut bow cover with utility knife or scissors to fit bow as desired.


TIP - Shur-Co.® bow covers are pre-cut extra long. As an option, you may trim your bow covers to overlap the top rail as shown, and protect your tarp from wearing on the top rail and bow brackets.

STEP 2: Place cover over bow. Line up lower edges of cover under bow. Install first bow clip about 4" from edge. Install remaining clips along lower edges of bow cover about 8" apart, working around obstructions.

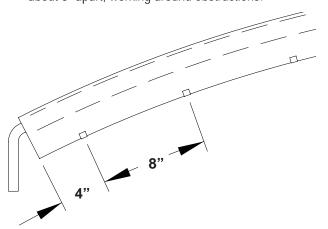

STEP 3: Repeat procedure for each bow.

CROSS SECTION:

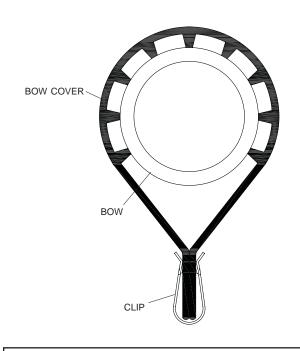

NOTE: Remove clips with needle nose pliers or screw driver.

PO BOX 713 • 2309 SHUR-LOK STREET YANKTON, SOUTH DAKOTA 57078-0713 PH. 1-800-474-8756 • FAX 605-665-0501

